

Parts List/Diagram

DESCRIPTION	PART NUMBER
1 Outer Seal	10-53-D0011
2 Drive-End Outer Bearing Cap	10-53-D0012
3 Drive-End Bearing Cap Bolts	10-53-D0013
4 Bearing Cap Lock Washers	10-53-D0014
5 Drive-End Outer Gasket	10-53-D0015
6 Drive-End Bearing	10-53-D0016
7 Hi-Torque Endbell	10-53-D0017
8 Bolts & Washers	10-53-D0018
9 Drive-End Bearing Spacer/Slinger	10-53-D0019
10 Drive-End Inner Bearing Cap	10-53-D0020
11 Inner Seal	10-53-D0021
12 Cable S2	10-53-L0022
13 Cable S1	10-53-L0023
14 Cable A2	10-53-L0024
15 Cable A1	10-53-L0025
16 Frame/Lead Grommet	10-53-L0026
17 Blower Seal Tite	10-53-L0027
18 Seal Tite	10-53-L0028
19 Seal Tite	10-53-L0029
20 Armature with Shaft	10-53-A0030
21 Exhaust Cover B	10-53-F0031
22 Exhaust Cover C	10-53-F0032
23 Exhaust Cover A	10-53-F0033
24 Exhaust Cover D	10-53-F0034
25 Inner-pole Bolt	10-53-F0025
26 Inner-pole Pole Piece	10-53-F0036
27 Inner-pole Coil	10-53-W0037
28 Inner-pole Shims	10-53-F0038
29 Inner-pole Shims	10-53-F0039
30 Commutator Covers - Upper	10-53-F0040
31 Field Coil Bolt	10-53-F0041
32 Field Coil Bolt Washer	10-53-F0042
33 Field Coil Open	10-53-W0043
34 Field Coil Crossed	10-53-W0044
35 Field Coil Spring Plate	10-53-F0045
36 Field Coil Pole Piece	10-53-F0046
37 Frame	10-53-F0047
38 Blower Mount Bolt	10-53-B0048
39 Blower Mount Washer	10-53-B0049
40 Blower Assembly	10-53-B0050
41 Commutator-End Bearing Cap Bolts	10-53-C0051
42 Commutator-End Outer Bearing Cap	10-53-C0052
43 Commutator-End Bolts & Washers	10-53-C0053
44 Gaskets	10-53-C0054

DESCRIPTION	PART NUMBER
45 Commutator-End Endbell	10-53-C0055
46 Commutator-End Bearing Lock Nut Set Screw	10-53-C0056
47 Commutator-End Bearing Lock Nut	10-53-C0057
48 Commutator-End Bearing / Outer Ring	10-53-C0058
49 Commutator-End Bearing	10-53-C0059
50 Commutator-End Inner Bearing Cap	10-53-C0060
51 Brush Holder Assembly	10-53-C0061
52 Carbon Brush	10-53-C0062
53 Washer	10-53-F0063
54 Bolt	10-53-F0064
55 Bottom Bolt-on Cover	10-53-F0065
56 Bottom Spring Cover	10-53-F0066
57 Copper Bus Connection	10-53-T0067
58 Terminal Box Covers	10-53-T0068
59 Bolt	10-53-T0069
60 Washer	10-53-T0070
61 Bolt	10-53-T0071
62 Washer	10-53-T0072
63 Washer	10-53-T0073
64 Glastic Stand Off	10-53-T0074
65 Bolt	10-53-T0075
66 Connection Plate	10-53-T0076
67 Gland	10-53-T0077
68 Terminal Box	10-53-T0078
69 Crouse-Hinds Lockout Switch	10-53-T0079

DESCRIPTION	PART NUMBER
70 Pressure Switch (XP)	10-53-T0080
71 Space Heater (120/240 VAC)	10-53-T0081
72 Terminal Board w/Indicator	10-53-T0082
73 Oilfield Hub	10-53-S0083
74 Hi-Torque Endbell	10-53-D0084

DESCRIPTION	PART NUMBER
75 Exhaust Cover Gasket	10-53-F0085
76 Nomex Gasket	10-53-F0086
77 Nomex Gasket	10-53-F0087
78 Blower Gasket	10-53-B0088
79 Blower Filter	10-53-B0089

